

## INSTALLATION INSTRUCTIONS



### Standard DOOR GUIDE

---


Best for an application in which the door will be installed on a wood floor or carpet that is over a plywood subfloor. A mortise along the bottom of the door is required.




# PARTS AND TOOLS

## INSTALLATION INSTRUCTIONS

### Tools Needed

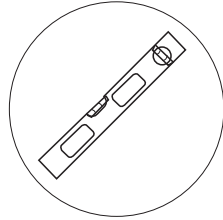


*Short Level*

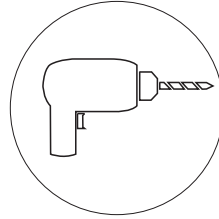


*Drill with Phillips bit*

### Parts Included

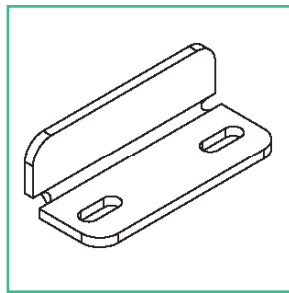


*Door Guide*

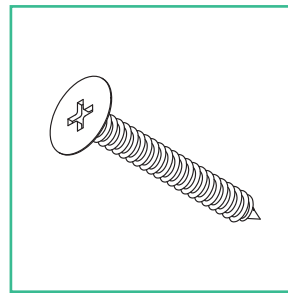


*Grabber Screws*

### Note

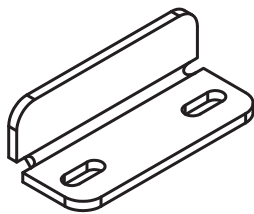


*Back*

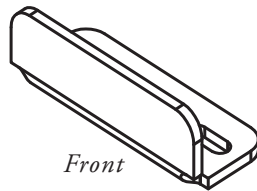

*Front*

A mortise is the channel that runs along the bottom of your Door.

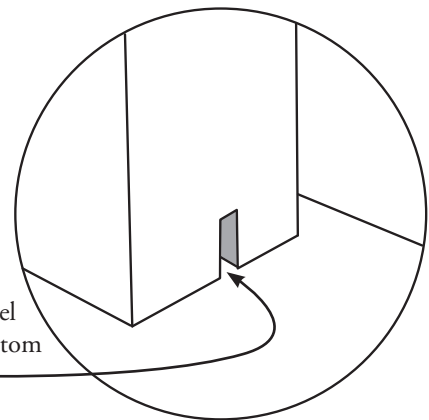


# DOOR GUIDE

## INSTALLATION INSTRUCTIONS

### 1. Installing Your Door Guide

- Slide your Door away from your doorway slightly. Using a level, make sure your door is hanging perfectly vertical. Place the Door guide on your floor so the vertical Bracket edge lines up with the mortise in your Door. Line up the edge of the Door Guide with the edge of your doorway.

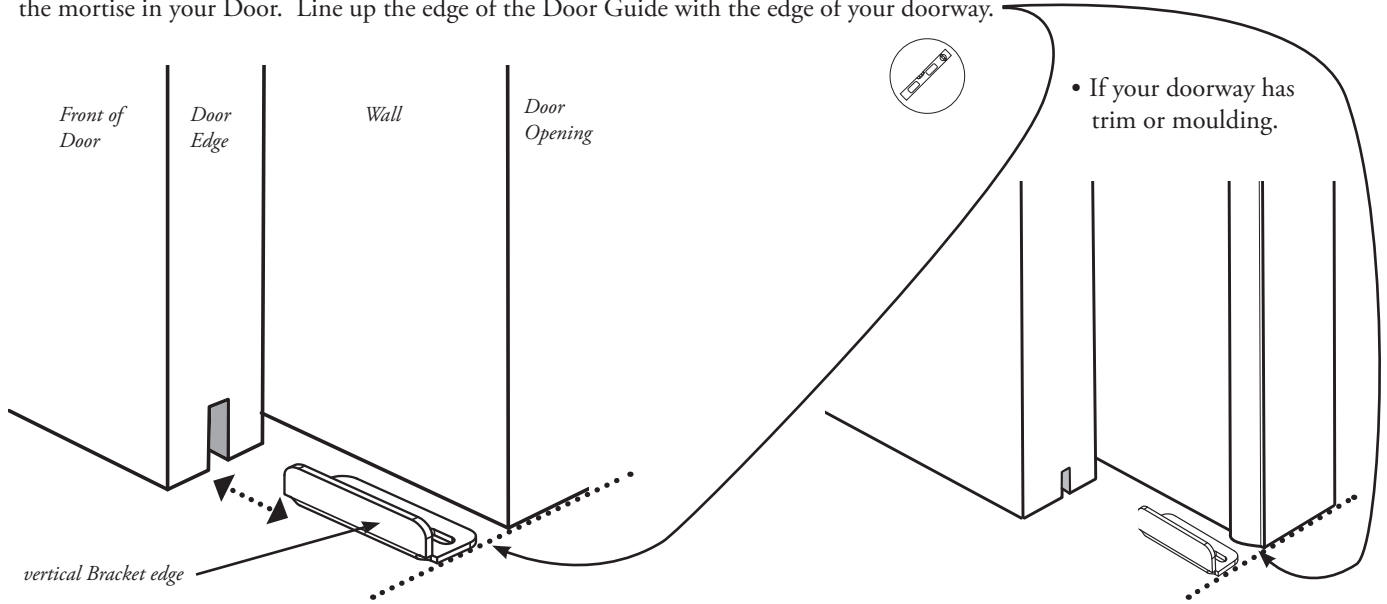

### 2. Aligning Door Over Door Guide

- Slide your door over so the Door mortise and Door cover the Door Guide. Use a level to ensure your Door is vertically plumb.



- You can now attach the Door Guide to the floor with Grabber Screws and a drill with a Phillips bit.

