

INSTALLATION INSTRUCTIONS

Installing a Header

for Your Rolling Door




Installing a Header

PLEASE NOTE: We strongly advise you to have someone help you install your Header. We recommend your Header be 4" longer than your Track (Header would extend 2" past Track on both ends).

Determining Header Location

Once you have penciled a line onto your wall for where your track will be installed (as per Track Installation Instructions), locate and mark where the wall studs are.

When installing your Track, be sure you are drilling into wall studs or into a Header that is installed through the wall studs. This will provide the stability your wall needs to hold the weight of your Door.

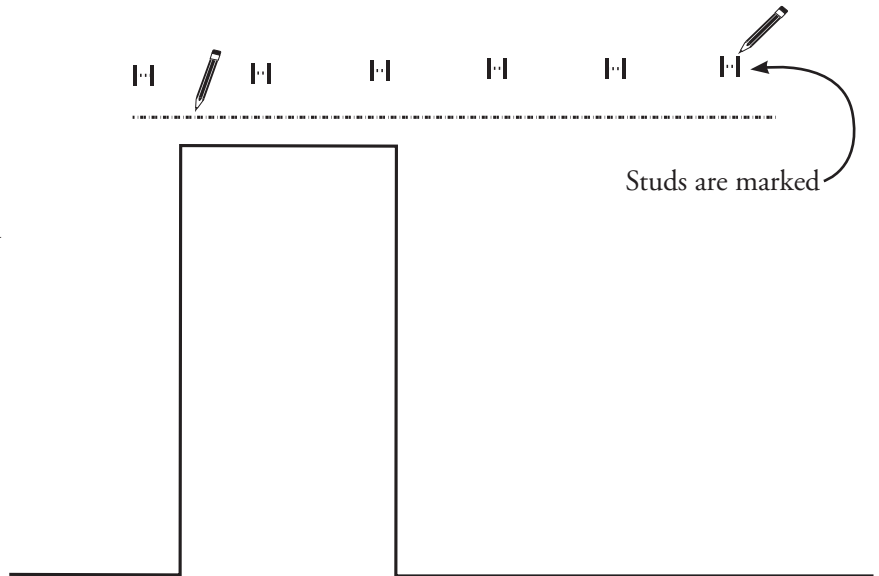

Measuring for your Track holes

On your Header, measure in 4" from the end and 3" from the top and 2" from the bottom of the header.




Installing a Header

Attaching Header

Place your Header onto your wall with the bottom 2" of the Header below your marked track line. Have someone hold the Header in place while you continue your pencil line for the holes in your Track from your wall onto the Header. Ensure your line is plumb using a level.

Mark for holes to be drilled making sure you will be drilling into studs. Drill 1/8" diameter pilot holes through the Header.

Attach Header to the wall with 3" Grabber Screws and a drill.

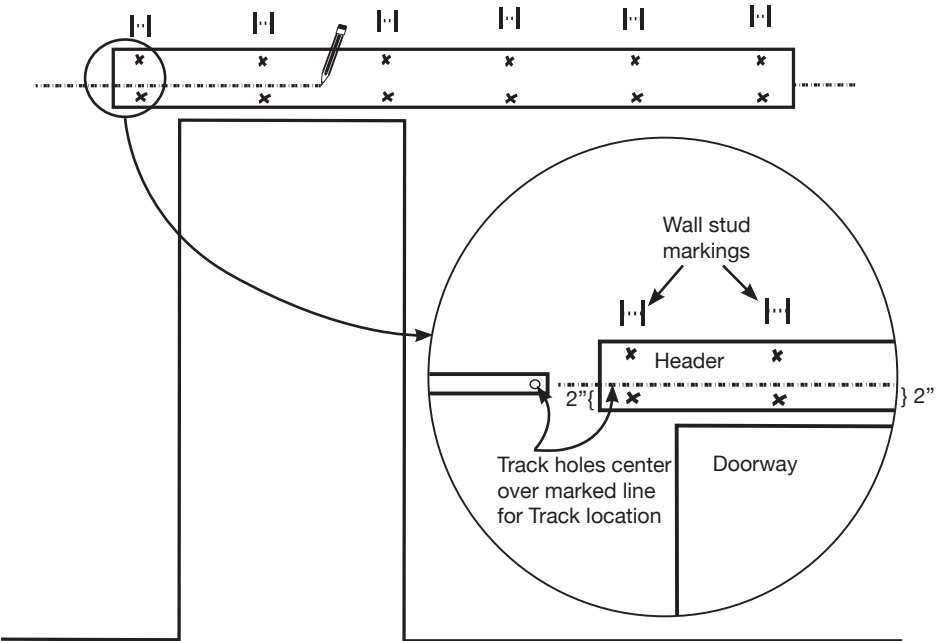

Your Header is ready for your Track System to be installed.

